

This tutorial demonstrates how to perform proof printing.

Download the Asanti Sample Files via the Asanti Client (Help>Asanti Online>Download Sample Files).

Proofing sign and display jobs can be easy and color accurate: just print one copy. But this is very time consuming and costs money (especially on expensive substrates) since they cannot always be sold. A proof can be very useful to check positioning (white layers, cut marks ...) or even colors accurately on a cheaper proofing device (e. g. Epson proofer).

This tutorial will teach you how to proof an individual image or to proof a complete sheet (with scaling to fit a smaller proofer). In this lesson, we will use the Epson SureColor P5000 (any other proofer can be used for this tutorial).

#### Prerequisites

- Digital Press: Jeti Tauro H3300LED (or Anapurna, Jeti Mira ...)
- Make sure that your Asanti System has the latest updates, refer to "<u>Updating your Asanti System</u>" for more info.
- Proofer TP: 10P Epson P5000 TP (or another Epson proofer, GDI proofer ....)

It is not possible to use any integrated measurement device (Epson SpectroProofer) for automatic validation.

# **1.** Preparing resources to execute this tutorial.

## Adding an A3 Output size.

Typically sign and display jobs will be too large to fit on a proofer. The content can be scaled down to fit on the proofer. For this tutorial, we will scale down to an A3 (420 mm x 297 mm) landscape size.

- 1. Go to the system overview, select the 10P Epson P5000 TP and double click the output size resource.
- 2. This will open the Output Sizes resources. Click the 🖻 icon to add a new output size.
- 3. Give the output size a name (e. g. A3 Landscape), width (420 mm) and height (297 mm). Click OK to confirm.
- 4. The output size has now been added. Close the Output Sizes



			Output size
Output Size	Dimensions	Orientation	Width 420 mm (Along press sheet leading edge)
A3 landscape	420 x 297 mm	0	
A3 portrait	297 x 420 mm	0	Height 297 mm (Along press sheet guide edge)
			The output size must have the same orientation as the press sheet
			Position on output device
			Orientation: 0 $\checkmark$ degrees
			Rotates the output size to fit the device

## Activate the output size in the proofer parameter set.

1. In the system overview select the 10P Epson P5000 TP and double click the Parameter Sets resource.



+ ++ / ! × 📾 🖻

AS Parameter Sets - 10...

Shrink to A3 landscap Shrink to A3 portrait

- 2. This will open the Parameter Sets resource with two components: image component (left) and output component (right).
- 3. Select the image component and click the initial icon to add a new image parameter set. Give the image parameter set a suitable name (Shrink to A3 Landscape).
- 4. In the image tab enable the "Sherpa-JobLogStrip" border and select the A3 Landscape output size together with the "Shrink to fit" scale content factor. Click OK to save the image parameter set.

## Calibrating a proofer with QMS

Proofer Calibration is required to compensate the physical proofer output state towards a reference standard. Various conditions may change (environmental) which have an influence on the color reproduction (also other batches of ink and media or the aging effect of the print components). During the calibration (or linearization) process a wedge is printed and measured. Based on these measurements, the calibration resource (ink table) will be adjusted to bring the proofer and software in sync.

1. Start the QMS Client and connect QMS with your Asanti server.

eparation Outp	ut and	Order	Ima	ge Ru	le-up :	Slug Lines			
Image Process	ing								
Reading Orientation Border		Right OWrong							
		From Output Size v Sherpa-JobLogStrip v							
Perform Check Proofing Reference		Never SherpaProof_ISOcheck_ISO12647-7:2016							
									Spot
Invalidate i	nk tabi	e if pro	of val	idation	fails				
Output Size Se	lection								
Output Size	A3 la	ndscap	pe			~	Select Autor	natically	
	Falba	d i	Width	148.5	52 mm	\$			
			lainhe:	200 0	a men	-			
Position Image	within Hori Vert	Outpu contal ical	it Size C	) Center		) Offset ) Offset	0 mm	•	
Position Image Horizontal	within Hori Vert	Outpu contal cal center tirror p	t Size C Press	) Center ) Center Sheet A	nchor ck of sh	) Offset ) Offset eet	0 mm 0 mm	•	
Position Image Horizontal Position Outpu	within Hori Vert	Outpu contal cal center tirror p	It Size C Press cosition	) Center ) Center ) Center Sheet / n for ba	r (@ Anchor ck of sh	) Offset ) Offset eet	0 mm 0 mm	•	
Position Image Horizontal Position Outpu Horizontal	within Hori Vert	Outpu contal cal center firror p Dev	it Size C Press position ice	) Center ) Center ) Center Sheet /	r (@ Anchor ck of sh	) Offset ) Offset eet	0 mm 0 mm	*	
Position Image Horizontal Position Outpu Horizontal Ganging	within Hori Vert	Outpu contal cal center firror p Dev D A	Press cosition ice center cply c	) Center ) Center ) Center Sheet / h for ba	Anchor ck of sh	) Offset ) Offset eet	0 mm	iobs	
Position Image Horizontal Position Outpu Horizontal Ganging Margins	within Hort Vert D t Size o	Outpu contal cal center firror p Dev 0 m	it Size C Press position ice center icply G	) Center ) Center Sheet / h for ba	Anchor ck of sh	) Offset ) Offset eet Before Job	0 mm 0 mm Across 1 0 mm	iobs	
Position Image Horizontal Position Outpu Horizontal Ganging Margins	within Hort Vert C N t Size o Left Right	Output contal cal enter lirror p C A A 0 m	it Size C Press cosition ice center m m	) Center ) Center Sheet / h for ba	Anchor ck of sh	) Offset ) Offset eet Before Job	0 mm 0 mm Across J 0 mm 0 mm	lobs	
Position Image Horizontal Position Outpu Horizontal Ganging Margins Scaling and Olip	within Hori Vert C N t Size c Left Right	Output contal cal center firror p C C C C C C C C C C C C C C C C C C C	ender Size C Press press consistor ice center m m m	) Center ) Center ) Center Sheet / h for ba	r (e Anchor ck of sh	) Offset ) Offset eet Before Job After Job	0 mm 0 mm Across J 0 mm 0 mm	lobs	
Position Image Horizontal Position Outpu Horizontal Ganging Margins Scaling and Clip Scale content	within Hort Vert C D N Left Right	Outpu contal cal cal cal cal cal cal cal cal cal c	tt Size C Press cosition ice ice center m m to fit	) Center ) Center ) Center Sheet A ianging	anchor ck of sh	) Offset ) Offset eet Before Job After Job	D mm D mm Across J O mm O mm	lobs	
Position Image Horizontal Position Outpu Horizontal Ganging Margins Scale content	within Hori Vert C N Kize c Left Right	Outpu contal cal ienter firror p C C A 0 m 0 m	tt Size C Press cosition ice center m to fit 100	) Center ) Center Sheet / isanging	r () Anchor ck of sh	) Offset ) Offset eet Before Job After Job	O mm O mm Across 1 O mm O mm	lobs tons	
Position Image Horizontal Position Outpu Horizontal Ganging Margins Scale content	within Hori Vert C D N Left Right Right F	Outpu contal cal ienter firror p C C A A 0 m 0 m 0 m 0 m	the size of the si	2093 Sheet A	Constant of share	© Offset © Offset eet Before Job After Job % ∑Cor %	0 mm 0 mm Across J 0 mm 0 mm	lobs cons	
Position Image Horizontal Position Output Horizontal Ganging Margins Scaling and Cit Scale content	within Hori Vert Color Left Right Coping	Output contal cal ienter C C C C C C C C C C C C C C C C C C C	t Size C C Press cosition ce center m m to fit 100 100 image	) Center Sheet / Ganging	r (C) Anchor ck of sh	© Offset ) Offset eet Before Job After Job % ∑Cor %	0 mm 0 mm Across J 0 mm 0 mm	lobs tions	
Position Image Horizontal Position Outpu Horizontal Ganging Margins Scaling and Clip Scale content	within Hort Vert C C Left Right C C C C C C C C C C C C C C C C C C C	Output contal cal cal cal cal cal cal cal cal cal c	to fit 100 100 100 100 100 100	) Center ) Center Sheet A sanging	r () Anchor ck of sh	© Offset © Offset eet Before Job After Job	0 mm 0 mm 0 nm 0 mm 0 mm	lobs	

AS Parameter Set - Image - Shrink to A3 landscape

2. Select your Epson proofer and double click the QMS sphere at the bottom to open the Quality Management window.



3. Select an ink set (CMYKOGcmkk) and media type (SPB170). This will filter and show the list of available Quality modes.

*Note: Multi-color devices: CMYKOGcmkk – other devices: CMYKcmkk* 

4. Select the UHQ720 quality and click the Calibrate button. The calibration status will be expired when the proofer has never been calibrated.

5. In the print Calibration Target window select your measurement device (left column) and click Print. We will select the Epson P5000 (=online SpectroProofer). Depending on the selected measurement device the calibration strip layout will be changed.



A QMS calibration job (order number: QMS – job name: [Ink Table] Calibration (QMS ID) will automatically be generated (this job will be deleted automatically after printing). The Calibration strip will be printed, dried and automatically measured by the online SpectroProofer. Even the ink table will be updated without any manual action required.

Ink Table name = [Print Colors]-[Media]-[Quality mode].

6. When you use a manual measurement device, click the Measure button (when the calibration strip has been printed) to start measuring and updating the ink table.

At the end (for both automatic measurement as manual measurement) you should see a green check mark after the Quality mode that you selected for the calibration cycle.

## **2.** Creating an image proof.

- 1. Click "File" "New Layout Job".
- 2. Select a printer (Jeti Tauro H 3300), media (Generic), Quality (Production Plus) and Calibrated Printing Mode (if not selected automatically).
- 3. In the images pane, click 🕑 and add the Woman with grapefruit 493x740 file.
- 4. Context click on the image and click "Proof Image ...".
- 5. The QuickProof dialog will open. Select the proofer (8P Epson 9890), Image parameter set (Shrink to A3 Landscape) and output parameter set (8P-SPB250-UHQ-720). Click Proof to generate the proof.
- 6. A proof job will be created with a fixed name starting with "QP" indicating QuickProof. The image will be printed shrunk to an A3 size. The proof job will be deleted once finished.





# 3. Creating a Sheet proof.

Proofing images does not give any indication how the image is positioned on the Sheet. Proofing the Sheet allows to verify the positioning of the images on the Sheet even if trueshape nesting is enabled. In this lesson, you will learn how to create a proof from a Sheet with true-shape nested images that contain white.

- 1. Click "File" "New Layout Job" and select a printer (Jeti Tauro H 3300LED), media (Generic), Quality (ProductionPlus).
- 2. Enable White White Image (Asanti) Pre-white (On White calibration).
- 3. In the images pane, click ⊕ and add the "Cleaning Product CMYKWhite.pdf" file.
- 4. Enable cutting and select the Zünd cutter from the dropdown list.
- 5. Context click the image and select "Auto Layout Image...".
- 6. Change the Media width to 600 mm.
- 7. Set Copy Count to 10.
- 8. Select "True-Shape Nesting" as type and click "Auto Layout 1 Image(s)" to confirm.



9. The Asanti client will search for the most economical way to position the images on the Sheet.



*True shape nesting is a license protected feature. Select rectangular nesting if you do not have the true shape nesting license.* 



- 10. Make sure the Zünd marks fit on the media.
- 11. Now context click on the press sheet and click "Proof Sheet...". This will open the QuickProof pane.
- 12. Enable "Finishing Operations" and "White".
- 13. Select the Epson Proofer TP as Proofer and select the newly made output parameter set.
- 14. Click Proof to submit the QuickProof job.

The proofer will now print the sheet (shrunk to an A3 size). Notice that white is printed on the proof as yellow (see screen shot). The Finishing Operations (in our example the "Through Cut" spot color) are also printed on the proof. The Finishing Operations on proof are represented in the same color as defined in the input document (Through Cut in the job is defined as Black. However, the "Through Cut" Finishing Operation for the Zünd cutter in the Zünd cutting (PDF) file might be defined as a different color).



## 4. Color Management in Asanti Proofing

Creating a proof is always a reproduction of certain color behavior (the inkjet printer or Digital Press) on a proofer device (Epson color space). This will need several "color conversions". This section touches briefly some of the conversions. More in depth info can be found in the <u>Basic and</u> <u>Advanced Color Management tutorials</u>.

#### Full gamut flow

In the full gamut flow the biggest possible color space of the digital press is used. All incoming data is converted to the color space of the inkjet printer (Digital Press).

The only exception is the CMYK colors. These colors are first tagged with a CMYK profile (e. g. ISOcoatedv2.icc). An ICC based conversion is always preferred above a simple conversion where the CMYK colors are simply mapped on the CMYK channels of the inkjet printer (Digital Press).



### Simulation flow

In a simulation flow the colors or a press condition (e.g. ISOcoatedv2) are "simulated" on the inkjet printer. This way of working allows to have the same color impression when the same design (photo, logo ...) is printed on multiple substrates such as store displays, glossy magazine, flexo packages... It is important for print buyers to have their brand identify under control on all kind of appearance.

All colors, except spot colors, are first converted towards the simulation profile before it's finally printed in the inkjet printer (Digital Press) color space.

